 
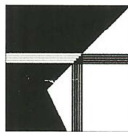 


POWERPROMPTER

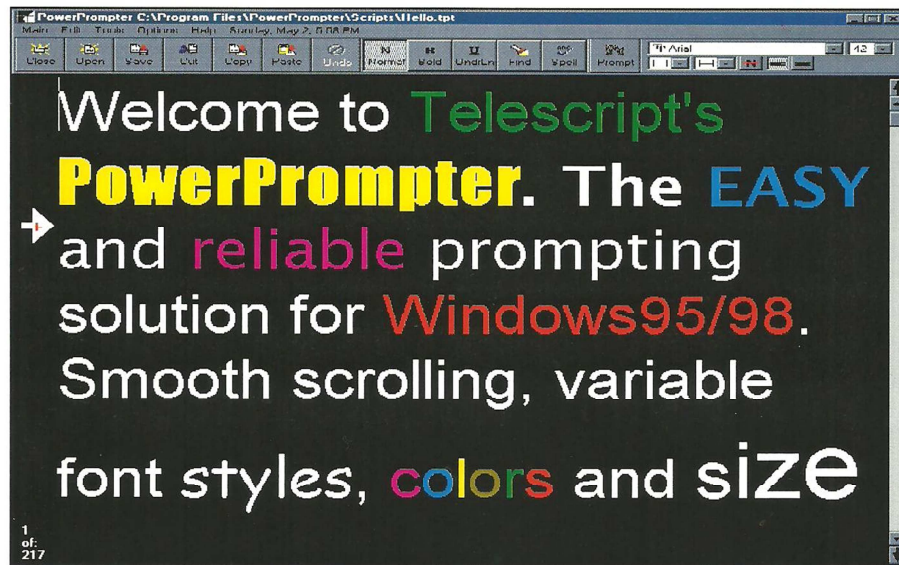 


TELESCRIPT
Prompting for Professionals

Download a Free Demo on the Internet
<http://www.telescript.co.uk>

POWERPROMPTER

POWERFUL AND EASY PROMPTING SOFTWARE FOR WINDOWS 95/98/NT

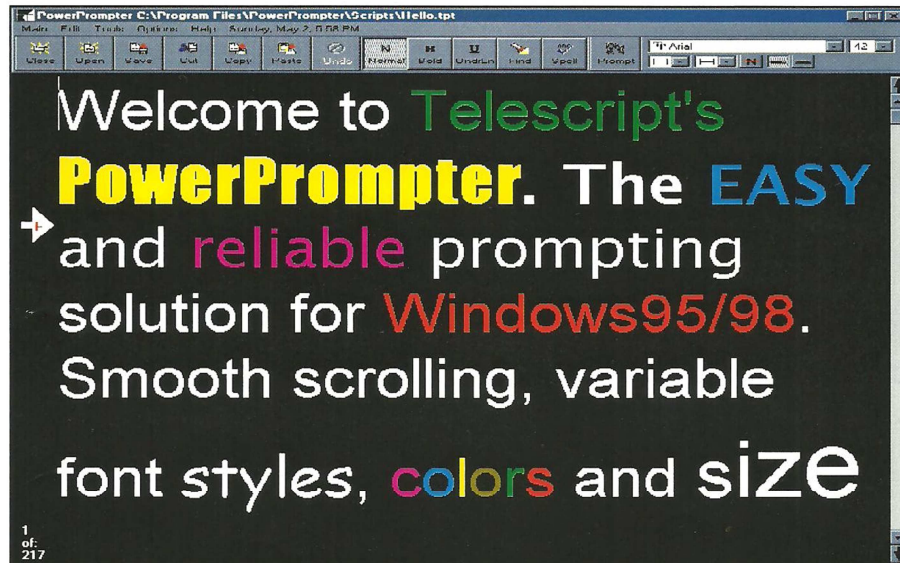

Now Telescript offers an user-friendly prompting solution for Windows 95/98. PowerPrompter™ has been developed with ease of use in mind with features such as cut, copy, paste and move functions so familiar in Windows. Not only is PowerPrompter™ simple, it's affordable too. And, of course, it's reliable. It's from Telescript.

Model TPP100



TELESCRIPT
Prompting for Professionals

FEATURES

- Color Prompting
- Super Smooth Scrolling
- Prompt with Hand Control/Trackball/Mouse
- Large, Sharp & Legible Letters
- Bold, Underline or Italic Text
- Cut, Copy, Paste & Move Functions
- Spell Checking, Book Marking & Post-Its
- Variable Font Size, Color & Style
- Supports Long File Names & Multiple Folders
- Foreign Language Fonts Supported

Download a Free Demo on the Internet
<http://www.telescript.co.uk>

Telescript Ltd. The Barn, Handpost Farmhouse, Maidens Green, Bracknell, Berks RG42 6LD
Phone: +44 (0) 1344 890-470 Fax: +44 (0) 1344 890-655

Table of Contents

Installation Starting PowerPrompter Trouble Shooting

Bolding Text
Bookmarks & Scene Numbers
Changing Font Colors
Changing Font Sizes
Changing the Background Color
Closing an Existing PowerPrompter File
Connecting two Computers together
Creating a Backup Floppy Disk of a Script
Creating a New Prompter Script
Creating a Script with another Word Processor
Creating a Show File Order
Default
Exiting the PowerPrompter Program
Exporting PowerPrompter Files to Microsoft Word or WordPerfect
Finding Text
Flash Words
FontSize
Hardlock
If you have a Laptop
If you have a TouchPad
Importing a Script made by another Word Processor
Inserting a Page Break
Italicizing Text
Keystroke Quick Reference
Opening an Existing File
Post-Its
Printing
Replacing Text
RTF
Saving a PowerPrompter File
Saving a PowerPrompter File as a Different Name
Trouble Shooting
Underling Text
Working with Fonts
Working with Text

Installing the **PowerPrompter** Software

Close all other Applications/Programs that are running in Windows.

1. Insert the PowerPrompter Disk 1 into the Disk Drive.
2. Click on the Start Icon, Run, in the run area type ...
A:\setup *(follow the screen instructions).*
3. When finished with Setup re-start your Computer.
4. Click and Drag the PowerPrompter Icon to the Desktop.

Really Important:

Go to Control Panel then access Power...

- At the **Power Tab** --- Do not let Windows Manage your Power
- At the **Disk Drive Tab** --- Do not turn off Drive after xx minutes.

Go to Control Panel then access Display...

- Set screensaver to **None...**
- Click on the tab for **Settings & ...**

Set the color palette to 256

Click on **Advanced Properties, the Performance Tab** & Set the performance to One Notch less than the maximum.
233mhz & faster machines set performance Two Notch's less than maximum.

If FastFind is enabled, You should disable it.

Removing FastFind
Place the pointer on the Task Bar...
Right click...
Left Click on Properties...
Left Click on Start Menu Programs...
Left Click on Remove...

(A list of Folders will appear)
Double Left Click on the Startup Folder
Left Click on FastFind...
Click on remove...
Follow Screen Directions to Close
(After removing Fastfind re-start the computer)

Starting PowerPrompter

1. Place the hardlock in the Printer Port and Start the Program.
(All functions of the PowerPrompter Software, except Scrolling will work without the Hardlock. To Scroll the Hardlock must be attached to the Printer/Parallel Port)
2. Double Click on the PowerPrompter Icon on the Desktop
3. Click on the OK Button to remove the copyright Message
4. Click on Options... Click on Working Directory/Folder...
5. Select the Folder you wish to work from.

Once the working Directory is Set, this will remain the Default.

or . . .

1. Click on the Start Button.
2. Click on Programs.
3. Double Click on PowerPrompter.
4. Click on the OK Button to remove the copyright Message.
5. Click on Options... Select the Working Directory/Folder you wish to work from.

Once the working Directory is Set, this will remain as the Default.

Note:

To Create a PowerPrompter Icon/Shortcut on the desktop:

-
- a. Place the Pointer on the Desktop and Right Click
 - b. Select New... Select Shortcut... Select Browse...
 - c. Double Click on the Program Files Folder...
 - d. Double Click on the PowerPrompter Folder...
 - e. Double Click on PowerPrompter.exe
 - f. Click Next... type Power Prompter
(Include the space between Power and Prompter)
 - g. Click Finish
-

Trouble Shooting

Slow Scroll Performance:

Right Click on the Desktop... select Properties...

Click on the tab for **Settings & ...**

set the color palette to 256

click on **Advanced Properties, the Performance Tab &**

Set the performance to One Notch less than the maximum.

Machines faster than 233mhz may require you to set performance

Two Notch's less than maximum.

PowerPrompter supports Video resolutions up to
1024x768 xga [Be sure your scan converter supports the resolution that
your computer is set to]

You may need to Set the Computers Video output to 800x600 or lower to match
your scan converter.

Scrolling freezes or jitters for a few seconds:

Check that all other programs are closed

If you have Microsoft Office or Microsoft Word installed on your computer,
Remove FastFind from the Startup Menu.

(After removing Fastfind re-start the computer)

Removing FastFind

Place the pointer on the Task Bar...

Right click...

Left Click on Properties...

Left Click on Start Menu Programs...

Left Click on Remove...

(A list of Folders will appear)

Double Left Click on the Startup Folder

Left Click on FastFind...

Click on remove...

Follow Screen Directions to Close

(After removing Fastfind re-start the computer)

Go to Control Panel then access Power...

At the **Power Tab** --- Do **not** let Windows Manage your Power

At the **Disk Drive Tab** --- Do **not** turn off Drive after xx minutes.

At the Monitor Tab --- Do not turn off display after xx minutes.

Go to Control Panel then access Display...

Set screensaver to **None...**

Click on the tab for **Settings & ...**

set the color palette to 256

click on **Advanced Properties, the Performance Tab &**

Set the performance to Two Notch's less than maximum.

Scrolling Jitters when in Master/Slave Mode:

[If Slaving does not work properly, check that the com ports are set correctly on both the Master & Slave Computers]

External Video not Displaying:

Switch your computers video mode by Pressing the appropriate function keys to activate the external video port. On my computer it is the Funtion Key (Fn) and the F8 key at the same time. (Many computers differ as to which funtion key is used to activate the external Video)

Internal Video not Displaying:

Switch your computers video mode by Pressing the appropriate function keys to activate the external & internal video port. On my computer it is the Funtion Key (Fn) and the F8 key at the same time. (Many computers differ as to which funtion key is used to activate the external Video)

Internal Screen goes Blank:

Make sure that your computer is plugged into a power source.

Go to Control Panel then access Display...

Set screensaver to None...

Go to Control Panel then access Power...

At the **Power Tab** --- Do **not** let Windows Manage your Power

At the **Disk Drive Tab** --- Do **not** turn off Drive after xx minutes.

At the Monitor Tab --- Do not turn off display after xx minutes.